



- 1 KEY (to JP4/6 CONTROLLER)
- 2 DSB (from TX EXCITER)
- 3 GND
- 4 OUT (to PRE DRIVER)
- 5 +12V CW (to JP4/2 CONTROLLER)
- 6 VOX (KEY on TX EXCITER)
- 7 +12V TUNE
- 8 2TONE OUT

- 1 AF INPUT (from JP2/6 on TX EXCITER)
- 2 V1_1
- 3 V1_2 < Jumper if TX Exciter Control is used
- 4 GND
- 5 +12V
- 6 LS OUTPUT
- 7 AUDIO IN
- 8 CW LED

* USE LINK BETWEEN C18 AND C34 IF COMPUTER CONTROL

Title		
AF CW TONE OSCILLATOR BOARD		
Size	Number	Revision
A3		
Date	2006-02-17	Sheet of
File	D:\PCB\...AF-CW-OSC-TONE\SchDoc	Drawn By: